

# PR140

High Temperature Pressure  
Data Logger



## PRODUCT USER GUIDE

To view the full MadgeTech product line, visit our website at [madgetech.com](http://madgetech.com).

### TABLE OF CONTENTS

2 Product Overview

2 Installation Guide

2 Device Operation

3 Device Maintenance

4 Need Help?



#### Dirección

Av. Fray Antonio Alcalde 1822  
Miraflores, 44270  
Guadalajara, Jal

#### Teléfonos

Mex: +52 (33)-3854-5975  
+52 (33)-3823-4349

#### Página Web

[tienda.logicbus.com.mx](http://tienda.logicbus.com.mx)

#### Correo electrónico

[ventas@logicbus.com](mailto:ventas@logicbus.com)



#### Address

8268 Clairemont Mesa Blvd,  
Suite 302, 92111  
San Diego, CA.

#### Website

[logicbus.com](http://logicbus.com)

#### Phone number

USA: +1 (619) 619-7350

#### E-mail

[sales@logicbus.com](mailto:sales@logicbus.com)

# PRODUCT USER GUIDE

## Product Overview

The PR140 can be used in both wet and dry applications up to 140 °C indefinitely. Available with Flush or NPT Pressure Port Top.

### Water Resistance

The PR140 is fully submersible and is rated IP68. It can be placed in environments with up to 230 ft (70 m) of water.

## Installation Guide

### Installing the Software

The Software can be downloaded from the MadgeTech website at [madgetech.com](http://madgetech.com). Follow the instructions provided in the Installation Wizard.

### Installing the Docking Station

IFC400 or IFC406 (sold separately) — Connect the device into a USB port with the interface cable. The drivers will install automatically.

## Device Operation

### Connecting and Starting the Data Logger

1. Once the software is installed and running, plug the interface cable into the docking station.
2. Connect the USB end of the interface cable into an open USB port on the computer.
3. Place the data logger into the docking station.
4. The data logger will automatically appear under **Connected Devices** within the software.
5. For most applications, select **Custom Start** from the menu bar and choose the desired start method, reading rate and other parameters appropriate for the data logging application and click **Start**. (*Quick Start applies the most recent custom start options, Batch Start is used for managing multiple loggers at once, Real Time Start stores the dataset as it records while connected to the logger.*)
6. The status of the device will change to **Running, Waiting to Start** or **Waiting to Manual Start**, depending upon your start method.
7. Disconnect the data logger from the interface cable and place it in the environment to measure.

**Note:** *The device will stop recording data when the end of memory is reached or the device is stopped. At this point the device cannot be restarted until it has been re-armed by the computer.*

### Downloading Data from a Data Logger

1. Place the logger into the docking station.
2. Highlight the data logger in the **Connected Devices** list. Click **Stop** on the menu bar.
3. Once the data logger is stopped, with the logger highlighted, click **Download**. You will be prompted to name your report.
4. Downloading will offload and save all the recorded data to the PC.

# PRODUCT USER GUIDE

## Device Operation (cont'd)

### Set Password

To password protect the device so that others cannot start, stop or reset the device:

1. In the **Connected Devices** panel, click the device desired.
2. On the **Device** Tab, in the **Information** Group, click **Properties**. Or, right-click the device and select **Properties** in the context menu.
3. On the **General** Tab, click **Set Password**.
4. Enter and confirm the password in the box that appears, then select **OK**.

**Note:** This product is rated for use up to 140 °C (284 °F). Please heed the battery warning. The product will explode if exposed to temperatures above 140 °C (284 °F).

## Device Maintenance

### O-Rings

O-ring maintenance is a key factor when properly caring for the PR140. The O-rings ensure a tight seal and prevent liquid from entering the inside of the device. Please refer to the application note **O-Rings 101: Protecting Your Data**, found at [madgetech.com](http://madgetech.com), for information on how to prevent O-ring failure.



### Battery Replacement

**Materials:** ER14250MR-145 Battery

1. Unscrew the bottom of the logger and remove the battery.
2. Place the new battery into the logger. Note the polarity of the battery. It is important to insert the battery with positive polarity pointing upward towards the probe. Failure to do so could result in product inoperability or potential explosion if exposed to high temperatures.
3. Screw the cover back onto the logger.

### Recalibration

MadgeTech recommends annual recalibration. To send devices back for calibration, visit [madgetech.com](http://madgetech.com).

# NEED HELP?



## Product Support & Troubleshooting:

- Visit our Resources online at [madgetech.com/resources](http://madgetech.com/resources).
- Contact our friendly Customer Support Team at (603) 456-2011 or [support@madgetech.com](mailto:support@madgetech.com).



## MadgeTech 4 Software Support:

- Refer to the built-in help section of the MadgeTech 4 Software.
- Download the MadgeTech 4 Software Manual at [madgetech.com](http://madgetech.com).
- Contact our friendly Customer Support Team at (603) 456-2011 or [support@madgetech.com](mailto:support@madgetech.com).



### Dirección

Av. Fray Antonio Alcalde 1822  
Miraflores, 44270  
Guadalajara, Jal

### Página Web

[tienda.logicbus.com.mx](http://tienda.logicbus.com.mx)

### Teléfonos

Mex: +52 (33)-3854-5975  
+52 (33)-3823-4349

### Correo electrónico

[ventas@logicbus.com](mailto:ventas@logicbus.com)



### Address

8268 Clairemont Mesa Blvd,  
Suite 302, 92111  
San Diego, CA.

### Website

[logicbus.com](http://logicbus.com)

### Phone number

USA: +1 (619) 619-7350

### E-mail

[sales@logicbus.com](mailto:sales@logicbus.com)

