

USB-DIO96H/50

High-drive Digital I/O

User's Guide

Hardware Revision 2

Trademark and Copyright Information

Measurement Computing Corporation, InstaCal, Universal Library, and the Measurement Computing logo are either trademarks or registered trademarks of Measurement Computing Corporation. Refer to the Copyrights & Trademarks section on mccdaq.com/legal for more information about Measurement Computing trademarks. Other product and company names mentioned herein are trademarks or trade names of their respective companies.

© 2019 Measurement Computing Corporation. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form by any means, electronic, mechanical, by photocopying, recording, or otherwise without the prior written permission of Measurement Computing Corporation.

Notice

Measurement Computing Corporation does not authorize any Measurement Computing Corporation product for use in life support systems and/or devices without prior written consent from Measurement Computing Corporation. Life support devices/systems are devices or systems that, a) are intended for surgical implantation into the body, or b) support or sustain life and whose failure to perform can be reasonably expected to result in injury. Measurement Computing Corporation products are not designed with the components required and are not subject to the testing required to ensure a level of reliability suitable for the treatment and diagnosis of people.

Table of Contents

Preface	
About this User's Guide	4
What you will learn from this user's guide	4
Conventions in this user's guide	4
Where to find more information	4
Chapter 1	
Introducing the USB-DIO96H/50	5
USB-DIO96H/50 block diagram	6
Chapter 2	
Installing the USB-DIO96H/50	7
Unpacking.....	7
Installing the software	7
Connecting the external power supply.....	7
Installing the hardware	7
Chapter 3	
Functional Details	8
Components.....	8
USB connector.....	8
External power connector	8
Molex connector	8
Power source jumper JP2.....	9
USB LED.....	9
PWR LED.....	9
Header connectors.....	10
Pull-up/down switches	10
Signal connections.....	10
Compatible cables and accessory products	11
Digital I/O (FIRSTPORTA Bit 0 through FOURTHPORTC Bit 7)	12
Power outputs	12
Ground.....	12
Mechanical drawings.....	13
Chapter 4	
Specifications	14
Digital input/output.....	14
Power.....	15
Environmental	15
USB specifications	15
Data transfer rates.....	15
Mechanical	16
Signal connectors.....	16
P1.....	16
P2.....	17
Declaration of Conformity	18

About this User's Guide

What you will learn from this user's guide

This user's guide describes the Measurement Computing USB-DIO96H/50 data acquisition device and lists device specifications.

This manual applies to revision 2 hardware and later

This manual applies to revision 2 of the USB-DIO96H/50 hardware, which uses a 5 V power supply. Revision 1 of the USB-DIO96H/50 hardware has a 9 V power supply and daisy-chained hub. For information on revision 1 hardware, refer to www.mccdaq.com/pdfs/manuals/USB-DIO96H-50_R1.pdf.

Conventions in this user's guide

For more information

Text presented in a box signifies additional information related to the subject matter.

Caution! Shaded caution statements present information to help you avoid injuring yourself and others, damaging your hardware, or losing your data.

bold text **Bold** text is used for the names of objects on a screen, such as buttons, text boxes, and check boxes.

italic text *Italic* text is used for the names of manuals and help topic titles, and to emphasize a word or phrase.

Where to find more information

Additional information about the USB-DIO96H/50 is available on our website at www.mccdaq.com. You can also contact Measurement Computing Corporation by phone, fax, or email with specific questions.

- Knowledgebase: kb.mccdaq.com
- Tech support form: www.mccdaq.com/support/support_form.aspx
- Email: techsupport@mccdaq.com
- Phone: 508-946-5100 and follow the instructions for reaching Tech Support

Introducing the USB-DIO96H/50

The USB-DIO96H/50 is supported under popular Microsoft® Windows® operating systems. The USB-DIO96H/50 is fully compatible with both USB 1.1 and USB 2.0 ports.

The USB-DIO96H/50 provides 96 digital I/O lines, high output current.

The 96 digital I/O lines are accessed through two 50-pin connectors. Each digital port group is divided into two 8-bit ports and two 4-bit ports and is a discrete emulation of 82C55 mode zero operation. You can configure each port independently for either input or output.

The USB-DIO96H/50 outputs are high-drive TTL that can source 24 mA and sink 64 mA. Additional buffering is typically not required to drive external devices.

Each digital port has associated DIP switches to drive the ports high during power up and reset. You can optionally set these switches for a pull-down configuration. All I/O bits are set to input mode on power up and reset.

The USB-DIO96H/50 is shipped in a rugged metal enclosure that you can mount on a DIN rail or on a bench (refer to [Figure 9](#) on page 13).

The USB-DIO96H/50 is powered by an external +5 V regulated power supply that is shipped with the board. A jumper-selectable Molex® connector is also available inside the case if you need an alternate power supply (the cable for this connector is not included).

This manual applies to revision 2 hardware and later

This manual applies to revision 2 of the USB-DIO96H/50 hardware, which uses a 5 V power supply. Revision 1 of the USB-DIO96H/50 hardware has a 9 V power supply and daisy-chained hub. For information on revision 1 hardware, refer to www.mccdaq.com/PDFs/Manuals/USB-DIO96H-50_R1.pdf.

USB-DIO96H/50 block diagram

USB-DIO96H/50 functions are illustrated in the block diagram shown here.

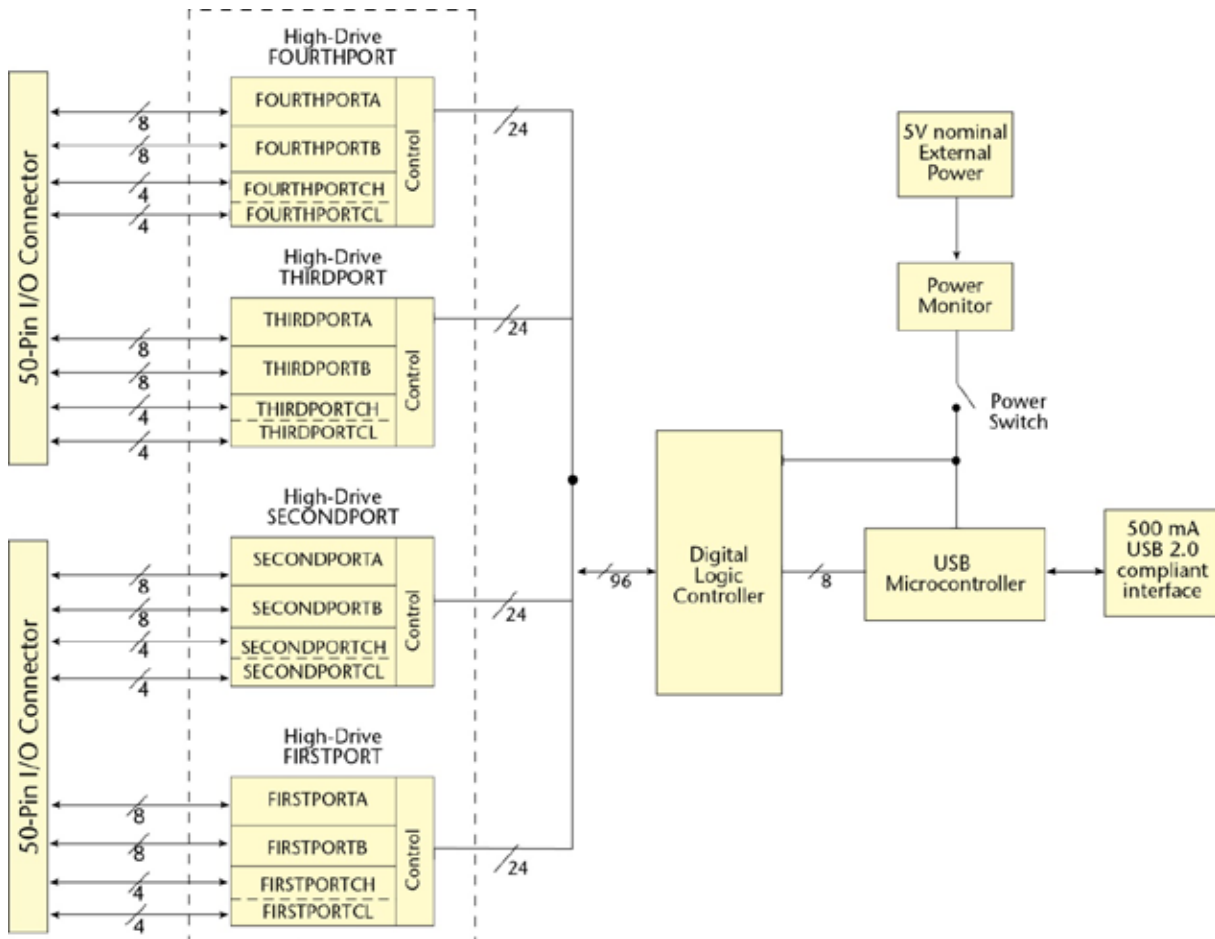


Figure 1. USB-DIO96H/50 functional block diagram

Installing the USB-DIO96H/50

Unpacking

As with any electronic device, you should take care while handling to avoid damage from static electricity. Before removing the device from its packaging, ground yourself using a wrist strap or by simply touching the computer chassis or other grounded object to eliminate any stored static charge.

Contact us immediately if any components are missing or damaged.

Installing the software

Refer to the MCC DAQ Quick Start and the USB-DIO96H/50 product page on our website for information about the available software.

Install the software before you install your device

The driver needed to run the USB-DIO96H/50 is installed with the software. Therefore, you need to install the software package you plan to use before you install the hardware.

Connecting the external power supply

Power to the USB-DIO96H/50 is provided with the +5 V external power supply (PS-5V3AEPS). You must connect the external power supply *before* connecting the USB cable to the device and your computer.

To connect the power supply to the USB-DIO96H/50, connect the external power cord to the power connector labeled **POWER IN** on the USB-DIO96H/50 enclosure (**P5** on the board). Refer to Figure 2 on page 8 for the location of this connector.

The **PWR** LED lights up when +5 V power is supplied to the USB-DIO96H/50. If the voltage supply is less than +4.1 V or more than +5.6 V, the **PWR** LED does not turn on.

Installing the hardware

Connect the USB-DIO96H using the cable provided to a USB port on a computer running Windows. Windows finds and installs the device driver automatically and notifies you that the device is ready to use.

Caution! Do not disconnect the device from the USB bus while the USB LED is on and the computer is communicating with the USB-DIO96H. You may lose data and/or your ability to communicate with the USB-DIO96H.

If the USB LED turns off

If the USB LED turns on but then turns off, the computer has lost communication with the USB-DIO96H. To restore communication, disconnect the USB cable from the computer, and then reconnect it. This should restore communication, and the USB LED should turn back *on*.

If your system does not detect the USB-DIO96H/50

Perform this procedure if a **USB device not recognized** message displays when you connect the device:


1. Unplug the USB cable from the USB-DIO96H/50.
2. Unplug the external power cord from the **POWER IN** connector on the enclosure.
3. Plug the external power cord back into the **POWER IN** connector.
4. Plug the USB cable back into the USB-DIO96H/50.

Your system should now properly detect the USB-DIO96H/50 hardware. Contact technical support if your system still does not detect the USB-DIO96H/50.

Functional Details

Components

The USB-DIO96H/50 components are shown in Figure 2.

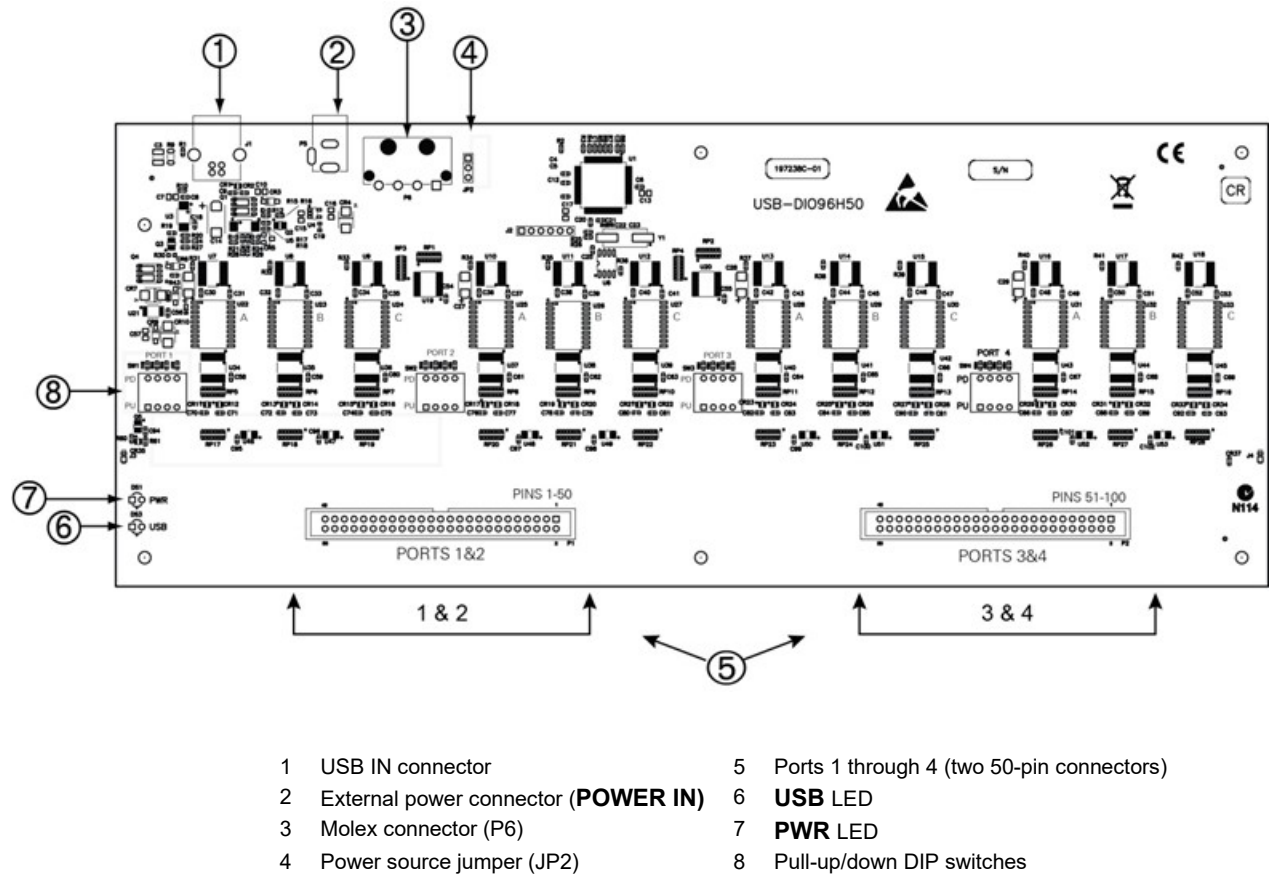

- 1 USB IN connector
- 2 External power connector (**POWER IN**)
- 3 Molex connector (P6)
- 4 Power source jumper (JP2)
- 5 Ports 1 through 4 (two 50-pin connectors)
- 6 **USB LED**
- 7 **PWR LED**
- 8 Pull-up/down DIP switches

Figure 2. USB-DIO96H/50 components

USB connector

Connect the supplied USB cable between the device and the USB port on the computer (or USB hub connected to the computer). This connector is labeled **USB IN** on the enclosure and **J1** on the board.

External power connector

The external power connector is labeled **POWER IN** on the enclosure and **P5** on the board. Connect the **POWER IN** connector to the supplied +5 V external power supply (PS-5V3AEPS). When running at full load, the device draws 2.6 A from the supply.

Molex connector

The internal Molex connector is labeled **P6** on the board. Remove the device enclosure to access this connector.

Internal power connector pinout

Pin 1	NC (no connect)
Pin 2	GND
Pin 3	GND
Pin 4	5V

Pin 1 (NC) of the Molex connector is directly to the left of the power source jumper (JP2).

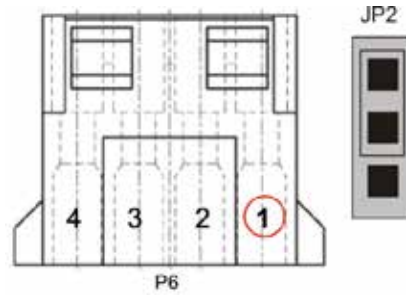


Figure 3. Molex connector (P6) pin assignments

Power source jumper JP2

The power source jumper is labeled **JP2** on the board. Use this jumper to configure the USB-DIO96H/50 to use either the external power connector (**POWER IN**) or the internal Molex connector. Figure 4 shows the jumper in each configuration mode.

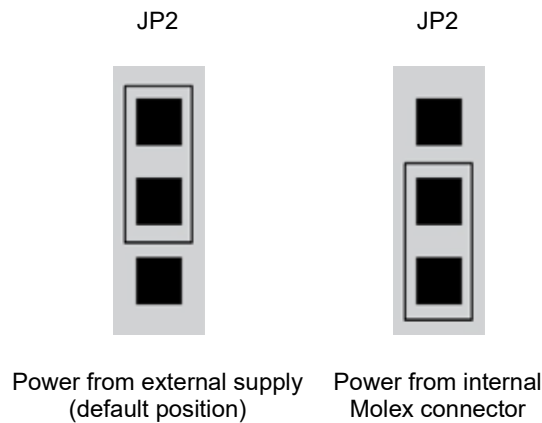


Figure 4. JP2 configuration modes

USB LED

The **USB LED** turns on to indicate the communication status of the USB-DIO96H/50. It uses up to 5 mA of current and cannot be disabled. The table below explains the function of the **USB LED**.

USB LED illumination

LED Behavior	Indication
Steady green	The USB-DIO96H/50 is connected to a computer or external USB hub.
Continuous blink	Initial communication is established between the device and the computer, or data is being transferred.

PWR LED

The **PWR LED** turns on when external power is supplied. The USB-DIO96H/50 incorporates an on-board voltage supervisory circuit that monitors the external power supply and disconnects power from the rest of the board components if the external power supply voltage is too high or too low. The **PWR LED** does not light under the following circumstances:

- when the input power falls below +4.1 V
- when the input power goes above +5.6 V

Header connectors

The USB-DIO96H/50 has two 50-pin header connectors labeled **P1** and **P2**. Refer to [Signal connections](#) below for pin assignments.

Pull-up/down switches

Use the on-board DIP switches labeled **PORT 1** through **PORT 4** to configure the pull-up/down configuration for each port. Each set of DIP switches includes four switches labeled 1 to 4. Switch 1 controls PORTA, switch 2 controls PORTB, switch 3 controls PORTCL, and switch 4 controls PORTCH. Figure 5 shows the DIP switches used to configure Port 1.

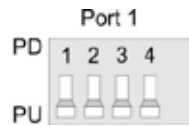


Figure 5. Pull-up/down switch configuration

All DIP switches are configured by default for pull-up (**PU**). Slide the switch to the **PD** position to configure for pull-down.

Signal connections

The USB-DIO96H/50 has two 50-pin header connectors labeled **P1** and **P2**.

Connector P1 provides the following connections:

- 48 DIO connections (**FIRSTPORTA Bit 0** through **SECONDPORTC Bit 7**)
- one ground connection (**GND**)
- one power connection (**+5V**)

Connector P2 provides the following connections:

- 48 DIO connections (**THIRDPORTA Bit 0** through **FOURTHPORTC Bit 7**)
- one ground connection (**GND**)
- one power connection (**+5V**)

50-pin connector pinout (P1)

Signal name	Pin		Pin	Signal name
GND	50	••	49	+5V
FIRSTPORTC Bit 0	48	••	47	FIRSTPORTC Bit 1
FIRSTPORTC Bit 2	46	••	45	FIRSTPORTC Bit 3
FIRSTPORTC Bit 4	44	••	43	FIRSTPORTC Bit 5
FIRSTPORTC Bit 6	42	••	41	FIRSTPORTC Bit 7
FIRSTPORTB Bit 0	40	••	39	FIRSTPORTB Bit 1
FIRSTPORTB Bit 2	38	••	37	FIRSTPORTB Bit 3
FIRSTPORTB Bit 4	36	••	35	FIRSTPORTB Bit 5
FIRSTPORTB Bit 6	34	••	33	FIRSTPORTB Bit 7
FIRSTPORTA Bit 0	32	••	31	FIRSTPORTA Bit 1
FIRSTPORTA Bit 2	30	••	29	FIRSTPORTA Bit 3
FIRSTPORTA Bit 4	28	••	27	FIRSTPORTA Bit 5
FIRSTPORTA Bit 6	26	••	25	FIRSTPORTA Bit 7
SECONDPORTC Bit 0	24	••	23	SECONDPORTC Bit 1
SECONDPORTC Bit 2	22	••	21	SECONDPORTC Bit 3
SECONDPORTC Bit 4	20	••	19	SECONDPORTC Bit 5
SECONDPORTC Bit 6	18	••	17	SECONDPORTC Bit 7
SECONDPORTB Bit 0	16	••	15	SECONDPORTB Bit 1
SECONDPORTB Bit 2	14	••	13	SECONDPORTB Bit 3
SECONDPORTB Bit 4	12	••	11	SECONDPORTB Bit 5
SECONDPORTB Bit 6	10	••	9	SECONDPORTB Bit 7
SECONDPORTA Bit 0	8	••	7	SECONDPORTA Bit 1
SECONDPORTA Bit 2	6	••	5	SECONDPORTA Bit 3
SECONDPORTA Bit 4	4	••	3	SECONDPORTA Bit 5
SECONDPORTA Bit 6	2	••	1	SECONDPORTA Bit 7

50-pin connector pin out (P2)

Signal name	Pin		Pin	Signal name
GND	100	•••	99	+5V
THIRDPORTC Bit 0	98	••	97	THIRDPORTC Bit 1
THIRDPORTC Bit 2	96	••	95	THIRDPORTC Bit 3
THIRDPORTC Bit 4	94	••	93	THIRDPORTC Bit 5
THIRDPORTC Bit 6	92	••	91	THIRDPORTC Bit 7
THIRDPORTB Bit 0	90	••	89	THIRDPORTB Bit 1
THIRDPORTB Bit 2	88	••	87	THIRDPORTB Bit 3
THIRDPORTB Bit 4	86	••	85	THIRDPORTB Bit 5
THIRDPORTB Bit 6	84	••	83	THIRDPORTB Bit 7
THIRDPORTA Bit 0	82	••	81	THIRDPORTA Bit 1
THIRDPORTA Bit 2	80	••	79	THIRDPORTA Bit 3
THIRDPORTA Bit 4	78	••	77	THIRDPORTA Bit 5
THIRDPORTA Bit 6	76	••	75	THIRDPORTA Bit 7
FOURTHPORTC Bit 0	74	••	73	FOURTHPORTC Bit 1
FOURTHPORTC Bit 2	72	••	71	FOURTHPORTC Bit 3
FOURTHPORTC Bit 4	70	••	69	FOURTHPORTC Bit 5
FOURTHPORTC Bit 6	68	••	67	FOURTHPORTC Bit 7
FOURTHPORTB Bit 0	66	••	65	FOURTHPORTB Bit 1
FOURTHPORTB Bit 2	64	••	63	FOURTHPORTB Bit 3
FOURTHPORTB Bit 4	62	••	61	FOURTHPORTB Bit 5
FOURTHPORTB Bit 6	60	••	59	FOURTHPORTB Bit 7
FOURTHPORTA Bit 0	58	••	57	FOURTHPORTA Bit 1
FOURTHPORTA Bit 2	56	••	55	FOURTHPORTA Bit 3
FOURTHPORTA Bit 4	54	••	53	FOURTHPORTA Bit 5
FOURTHPORTA Bit 6	52	••	51	FOURTHPORTA Bit 7

Compatible cables and accessory products

The table below lists the board connectors, applicable cables, and compatible accessory boards.

Board connectors, cables, accessory equipment

Connector (P1 and P2)	50-pin 0.1" IDC type box header	
Compatible cables	C50FF-x, 50-pin ribbon cable. x = 3 or 6 feet (Figure 6)	
Compatible accessory products	SCB-50 CIO-MINI50 (2) CIO-TERM100 CIO-SPADE50 (2) CIO-ERB24	CIO-SERB24/FD CIO-ERB48 CIO-SERB48 SSR-RACK24 SSR-RACK48

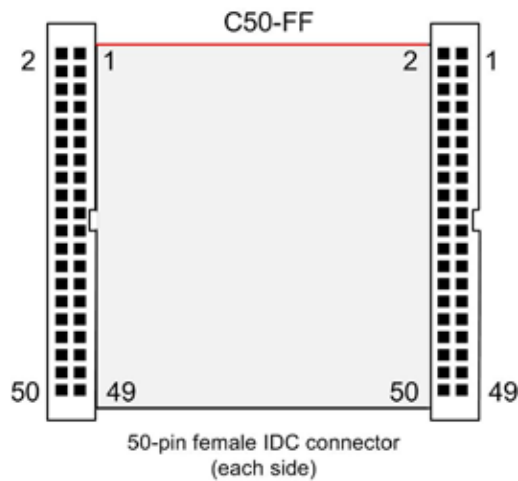


Figure 6. C50FF-x cable

Details on the following compatible field wiring products are available on our website at www.mccdaq.com/products/screw_terminal_bnc.aspx:

- CIO-MINI50 – 50-pin screw terminal board.
- CIO-TERM100 – 100-pin screw terminal board (two 50-pin IDC connectors).
- CIO-SPADE50 — 16" × 4" termination panel which mates with both 37-pin and 50-pin connectors.
- SCB-50 – 50-conductor, shielded signal connection box.

Details on the following compatible signal conditioning products are available on our website at www.mccdaq.com/products/signal_conditioning.aspx:

- CIO-ERB24 – 24 Form C relays, 6-amp relay accessory board for digital signal conditioning.
- CIO-SERB24/FD – 24 Form C relays, 10-amp, fault detecting relay accessory board with socketed and field-replaceable relays.
- CIO-ERB48 – 48 Form C relays, 6-amp, relay, 50-pin accessory board for digital signal conditioning.
- CIO-SERB48 – 24 Form C relays, 10-amp relay accessory board with socketed and field-replaceable relays.
- SSR-RACK24 – 24-channel solid-state relay mounting rack for digital signal conditioning.
- SSR-RACK48 – 48-channel solid-state relay mounting rack with quad-format devices.

More information about digital signals

Additional information about digital signal connections and I/O techniques is available in the *Guide to DAQ Signal Connections* (available on our web site at www.mccdaq.com/support/DAQ-Signal-Connections.aspx).

Digital I/O (FIRSTPORTA Bit 0 through FOURTHPORTC Bit 7)

You can connect 96 digital I/O lines to the two 50-pin connectors. Each digital port group is divided into two 8-bit ports and two 4-bit ports and is a discrete emulation of 82C55 mode zero operation. You can configure each port independently for either input or output.

Output (sink) current limits

Each DIO pin can sink 64 mA maximum when configured for output.

Output (source) current limits

Each DIO pin can source 24 mA maximum when configured for output.

More information about digital signal connections

Additional information about digital signal connections and I/O techniques is available in the *Guide to DAQ Signal Connections* (available on our web site at www.mccdaq.com/support/DAQ-Signal-Connections.aspx).

Power outputs

The USB-DIO96H/50 has two +5 V power output pins (**5V**). A total of 50 mA may be drawn from these outputs.

Caution! Each **5V** power connection is an output. Do not connect to an external power supply or you may damage the USB-DIO96H/50 and possibly the computer.

Ground

Each 50-pin header provides a ground pin (**GND**) that provide a common ground for all digital functions on the connector.

Mechanical drawings

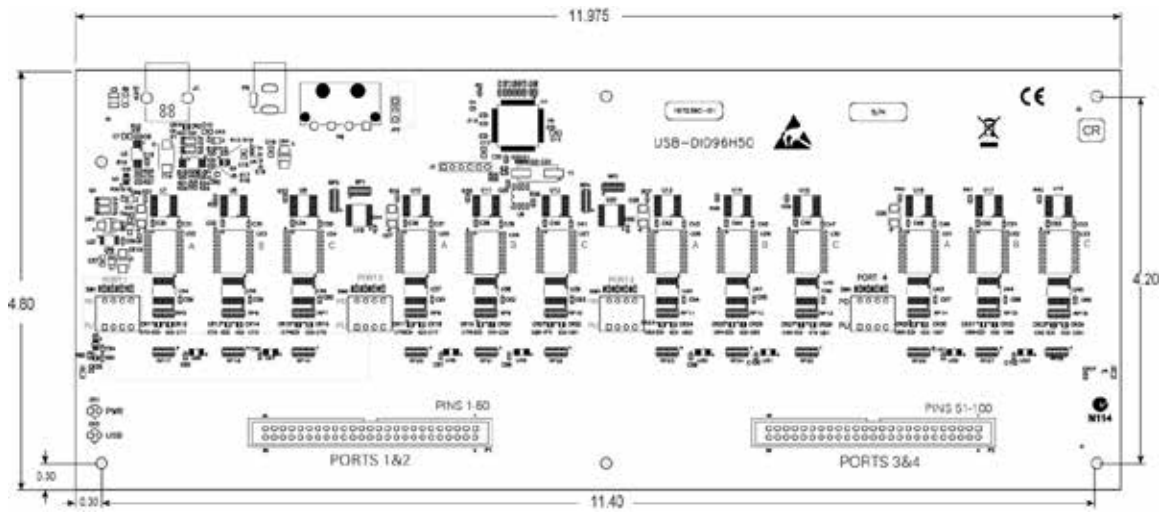


Figure 7. Circuit board dimensions

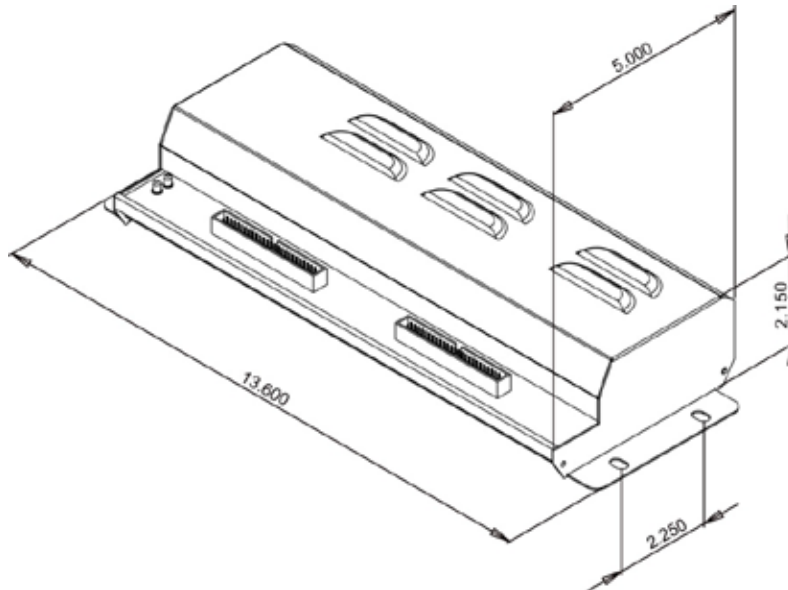


Figure 8. Enclosure dimensions

Specifications

This specification applies to revision 2 hardware and later

This specification applies to revision 2 of the USB-DIO96H/50 hardware, which uses a 5 V power supply. Revision 1 of the USB-DIO96H/50 hardware was designed with a 9 V power supply and daisy chained hub. For revision 1 hardware specifications, refer to www.mccdaq.com/PDFs/Manuals/USB-DIO96H-50_R1.pdf.

All specifications are subject to change without notice.

Typical for 25 °C unless otherwise specified.

Specifications in *italic text* are guaranteed by design.

Digital input/output

Table 1. Digital I/O specifications

Parameter	Specification
Output	74ABT244A
Input	74ACT373
Configuration	Eight banks of 8, eight banks of 4, programmable by bank as input or output
Pull-up/pull-down	High impedance pull-up/pull-down selectable via DIP switch for each digital input port.
Number of I/O	96
Output high	2.0 V min @ -24 mA
Output low	0.5 V max @ 64 mA
Input high	2.0 V min, 5.5 V max
Input low	0.8 V max, -0.5 V absolute min
Input impedance	47 k Ω (series resistance)
Source current	24 mA per output max
Sink current	64 mA per output max
Power up state	Input mode
Debounce mode	Debouncing option available through firmware that samples all inputs eight times over a specified interval and latches out the input state only when eight consecutive samples are identical (all 0s or all 1s). Available debouncing intervals are 1 ms, 2 ms, 5 ms, 10 ms, 20 ms, 50 ms, 100 ms, 200 ms, and 400 ms.
Debounce interval accuracy	+0% / -12.5%

Power

Table 2. Power specifications

Parameter	Conditions	Specification
USB +5 V input voltage range		4.75 V min to 5.25 V max
USB +5 V supply current	All modes of operation	<100 mA
External power input (Note 1)		5 VDC \pm 5% (5 VDC power supply provided)
External power supply (included)	MCC p/n PS-5V3AEPS	5 VDC, 15 W, 5% regulation
Alternate external power supply	From PC auxiliary power (cable not included)	Jumper selectable Molex [®] connector internal to case
Voltage supervisor limits	4.13 V > V _{ext} or V _{ext} > 5.59 V	PWR LED = Off (power fault)
	4.13 V < V _{ext} < 5.59 V	PWR LED = On
Power supply current		2.7 A max
User 5 V output voltage range	Available at +5 V pins	4.0 V min, 5.25 V max
User 5 V output current available	Total from all +5 V pins	50 mA max

Note 1: Voltage specification applies at barrel plug power input. The power supply provided with the board meets this specification at the rated total power supply current. If a different power supply is used, small line resistances could cause significant voltage drop between the power supply and the barrel plug input.

Environmental

Table 3. Environmental specifications

Parameter	Specification
Operating temperature range	0 °C to 60 °C
Storage temperature range	-40 °C to 85 °C
Humidity	0% to 90% non-condensing

USB specifications

Table 4. USB specifications

Parameter	Specification
USB "B" connector	Input
USB device type	USB 2.0 (full-speed)
Device compatibility	USB 1.1, USB 2.0
USB cable type	A-B cable, UL type AWM 2527 or equivalent. (min 24 AWG VBUS/GND, min 28 AWG D+/D-)
USB cable length	3 m (9.84 ft) max

Data transfer rates

Table 5. Data transfer rate specifications

Parameter	Specification
Digital I/O transfer rates (software paced)	System-dependent, 33 to 250 port reads/writes or single bit reads/writes per second typ

Mechanical

Table 6. Mechanical specifications

Parameter	Specification
Card dimensions	304.8 × 121.9 × 20.0 mm (12.0 × 4.8 × 0.8 in.)
Enclosure dimensions	342.9 × 125.7 × 58.9 mm (13.50 × 4.95 × 2.32 in.)

Signal connectors

Table 7. Ribbon connector specifications

Parameter	Specification
Connectors	P1-P2: 50-pin 0.1" IDC type box header
Compatible cables	C-50FF-x 50-pin ribbon cable
Compatible accessory products	SCB-50 CIO-MINI50 (2) CIO-TERM100 CIO-SPADE50 (2) CIO-ERB24 CIO-SERB24/FD CIO-ERB48 CIO-SERB48 SSR-RACK24 SSR-RACK48

P1

Table 8. P1 pinout

Pin	Signal name	Pin	Signal name
50	GND	49	+5V
48	FIRSTPORTC Bit 0	47	FIRSTPORTC Bit 1
46	FIRSTPORTC Bit 2	45	FIRSTPORTC Bit 3
44	FIRSTPORTC Bit 4	43	FIRSTPORTC Bit 5
42	FIRSTPORTC Bit 6	41	FIRSTPORTC Bit 7
40	FIRSTPORTB Bit 0	39	FIRSTPORTB Bit 1
38	FIRSTPORTB Bit 2	37	FIRSTPORTB Bit 3
36	FIRSTPORTB Bit 4	35	FIRSTPORTB Bit 5
34	FIRSTPORTB Bit 6	33	FIRSTPORTB Bit 7
32	FIRSTPORTA Bit 0	31	FIRSTPORTA Bit 1
30	FIRSTPORTA Bit 2	29	FIRSTPORTA Bit 3
28	FIRSTPORTA Bit 4	27	FIRSTPORTA Bit 5
26	FIRSTPORTA Bit 6	25	FIRSTPORTA Bit 7
24	SECONDPORTC Bit 0	23	SECONDPORTC Bit 1
22	SECONDPORTC Bit 2	21	SECONDPORTC Bit 3
20	SECONDPORTC Bit 4	19	SECONDPORTC Bit 5
18	SECONDPORTC Bit 6	17	SECONDPORTC Bit 7
16	SECONDPORTB Bit 0	15	SECONDPORTB Bit 1
14	SECONDPORTB Bit 2	13	SECONDPORTB Bit 3
12	SECONDPORTB Bit 4	11	SECONDPORTB Bit 5
10	SECONDPORTB Bit 6	9	SECONDPORTB Bit 7
8	SECONDPORTA Bit 0	7	SECONDPORTA Bit 1
6	SECONDPORTA Bit 2	5	SECONDPORTA Bit 3
4	SECONDPORTA Bit 4	3	SECONDPORTA Bit 5
2	SECONDPORTA Bit 6	1	SECONDPORTA Bit 7

P2

Table 9. P2 pinout

Pin	Signal name	Pin	Signal name
100	GND	99	+5V
98	THIRDPORC Bit 0	97	THIRDPORC Bit 1
96	THIRDPORC Bit 2	95	THIRDPORC Bit 3
94	THIRDPORC Bit 4	93	THIRDPORC Bit 5
92	THIRDPORC Bit 6	91	THIRDPORC Bit 7
90	THIRDPORB Bit 0	89	THIRDPORB Bit 1
88	THIRDPORB Bit 2	87	THIRDPORB Bit 3
86	THIRDPORB Bit 4	85	THIRDPORB Bit 5
84	THIRDPORB Bit 6	83	THIRDPORB Bit 7
82	THIRDPORA Bit 0	81	THIRDPORA Bit 1
80	THIRDPORA Bit 2	79	THIRDPORA Bit 3
78	THIRDPORA Bit 4	77	THIRDPORA Bit 5
76	THIRDPORA Bit 6	75	THIRDPORA Bit 7
74	FOURTHPORC Bit 0	73	FOURTHPORC Bit 1
72	FOURTHPORC Bit 2	71	FOURTHPORC Bit 3
70	FOURTHPORC Bit 4	69	FOURTHPORC Bit 5
68	FOURTHPORC Bit 6	67	FOURTHPORC Bit 7
66	FOURTHPORB Bit 0	65	FOURTHPORB Bit 1
64	FOURTHPORB Bit 2	63	FOURTHPORB Bit 3
62	FOURTHPORB Bit 4	61	FOURTHPORB Bit 5
60	FOURTHPORB Bit 6	59	FOURTHPORB Bit 7
58	FOURTHPORA Bit 0	57	FOURTHPORA Bit 1
56	FOURTHPORA Bit 2	55	FOURTHPORA Bit 3
54	FOURTHPORA Bit 4	53	FOURTHPORA Bit 5
52	FOURTHPORA Bit 6	51	FOURTHPORA Bit 7

CE Declaration of Conformity
According to ISO/IEC 17050-1:2010

Manufacturer: Measurement Computing Corporation
Address: 10 Commerce Way
Norton, MA 02766
USA
Product Category: Electrical equipment for measurement, control and laboratory use.
Date and Place of Issue: May 3, 2016, Norton, Massachusetts USA
Test Report Number: EMI4813.07

Measurement Computing Corporation declares under sole responsibility that the product

USB-DIO96H/50, Board Revision D* or later

Complies with the essential requirements of the following applicable European Directives:

Electromagnetic Compatibility (EMC) Directive 2014/30/EU
Low Voltage Directive 2014/35/EU
RoHS Directive 2011/65/EU

Conformity is assessed in accordance to the following standards:

EMC:

Emissions:

- EN 61326-1:2013 (IEC 61326-1:2012), Class A
- EN 55011: 2009 + A1:2010 (IEC CISPR 11:2009 + A1:2010), Group 1, Class A

Immunity:

- EN 61326-1:2013 (IEC 61326-1:2012), Controlled EM Environments
- EN 61000-4-2:2008 (IEC 61000-4-2:2008)
- EN 61000-4-3 :2010 (IEC61000-4-3:2010)
- EN 61000-4-4 :2012 (IEC61000-4-4:2012)
- EN 61000-4-5 :2014 (IEC61000-4-5:2014)
- EN 61000-4-6 :2013 (IEC61000-4-6:2013)
- EN 61000-4-11:2004 (IEC61000-4-11:2004)

Safety:

- EN 61010-1:2010 (IEC 61010-1:2010)

Environmental Affairs:

Articles manufactured on or after the Date of Issue of this Declaration of Conformity do not contain any of the restricted substances in concentrations/applications not permitted by the RoHS Directive.



Carl Haapaoja, Director of Quality Assurance

*The board revision may be determined from the part number label on the board that states "197238X-01L", where X is the board revision.

Measurement Computing Corporation
10 Commerce Way
Norton, Massachusetts 02766
(508) 946-5100
Fax: (508) 946-9500
E-mail: info@mccdaq.com
www.mccdaq.com

NI Hungary Kft
H-4031 Debrecen, Hátar út 1/A, Hungary
Phone: +36 (52) 515400
Fax: +36 (52) 515414
<http://hungary.ni.com/debrecen>